





**BLOSSOM**<sup>®</sup>  
luxury ma de simple

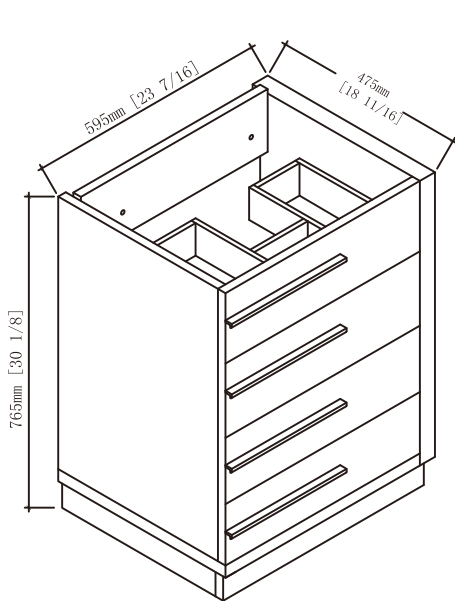

V8005-24

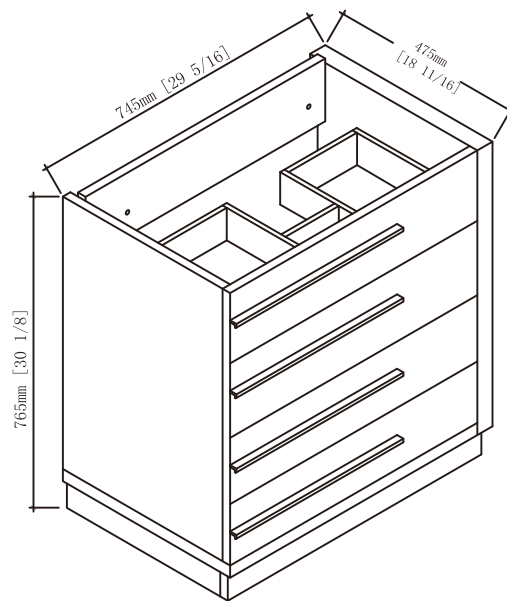

V8005-30

**[ BARCELONA ]**  
Series Vanities  
**Specifcation & Installation Guide**

## Features

- Modern design with high glossy paint or dark oak melamine finishes.
- Soft-closing drawers with full extension.
- Top three drawers with U cut-out to make it easier for plumbing works.
- Compatible matching mirror, medicine cabinet or LED mirror, medicine cabinet.
- Easy installation

## Package Dimension

**24"** 26 3/8" x 21 21/32" x 33 5/64"

**30"** 32 9/32" x 21 21/32" x 33 5/64"

## Colors / Finishes

Glossy White - 01

Dark Oak - 07

## Gross Weight

**24"** 102 LBS


**30"** 125 LBS

## Sink Top Options

	Vanities	Ceramic basin	Artificial stone basin
<b>24"</b>	V8014-24		A10 2419 04
<b>30"</b>	V8014-30		A10 3019 04


**30"**

29-5/16" X 18-11/16" X 30-1/8"

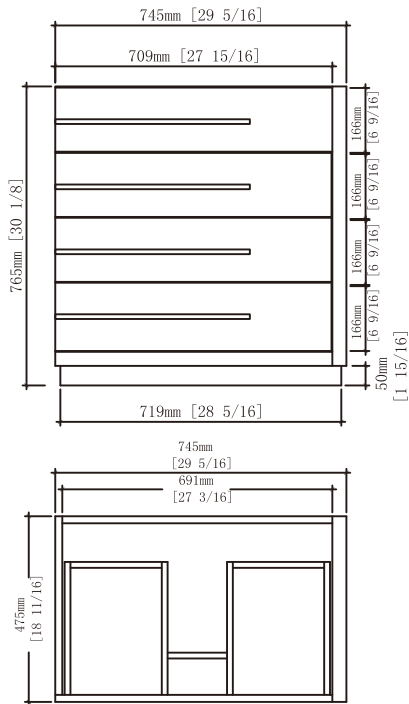



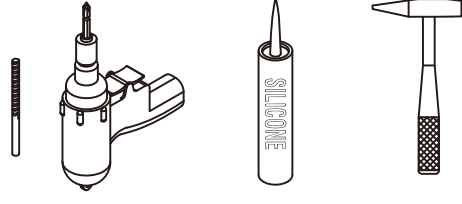


**24"**

23-7/16" X 18-11/16" X 30-1/8"

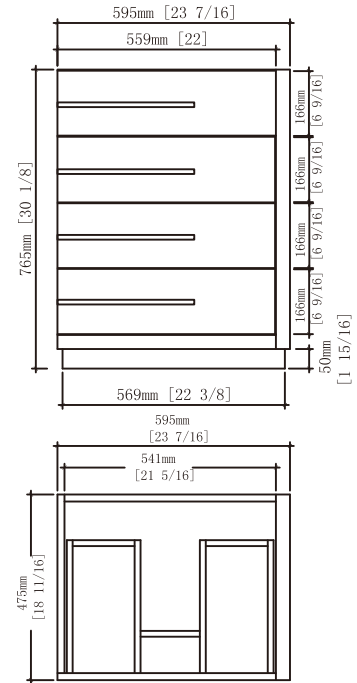


## Side View

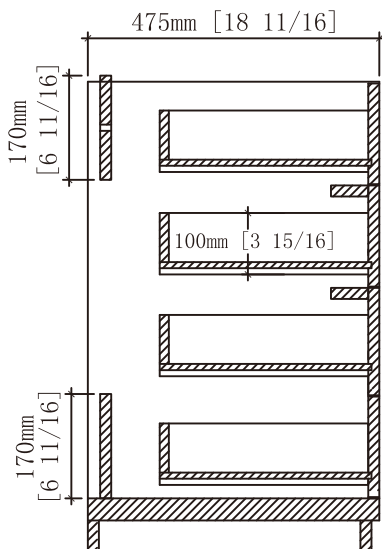

Hardware				Tools (not includes)	
No.		Draw	Qty		
A	White rubber plug (Ø6mm)		2pcs		
B	Screws (Ø4 x 68mm)		2pcs		
C	Stainless steel cover		2pcs		


## STEP 1

Mark the pre-drilled holes with a pencil or marker after positioning the vanity.

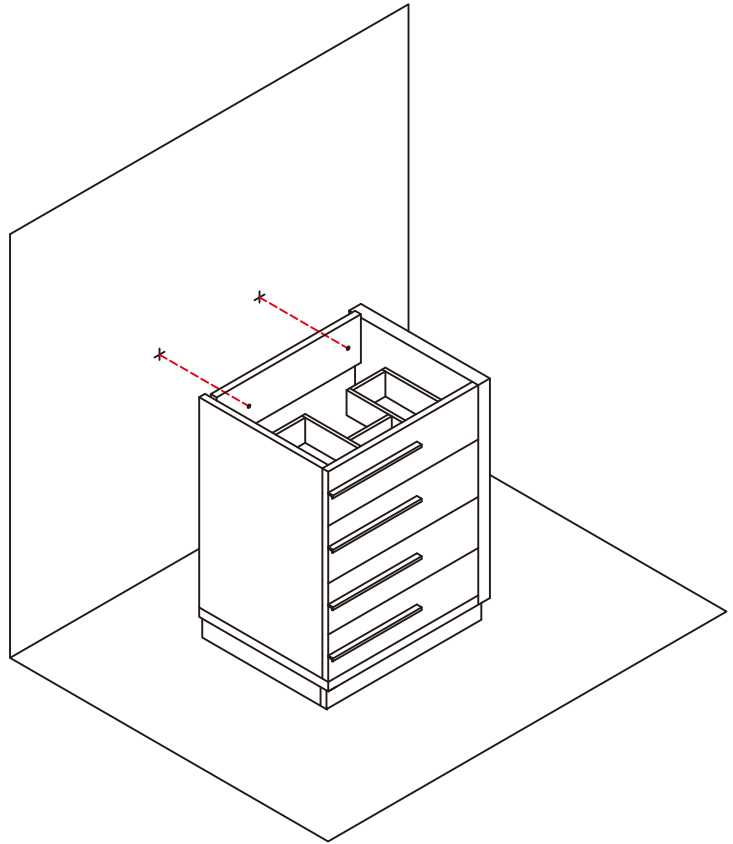


## STEP 2

Drill the holes with suitable drill-bits base on different condition of the wall.

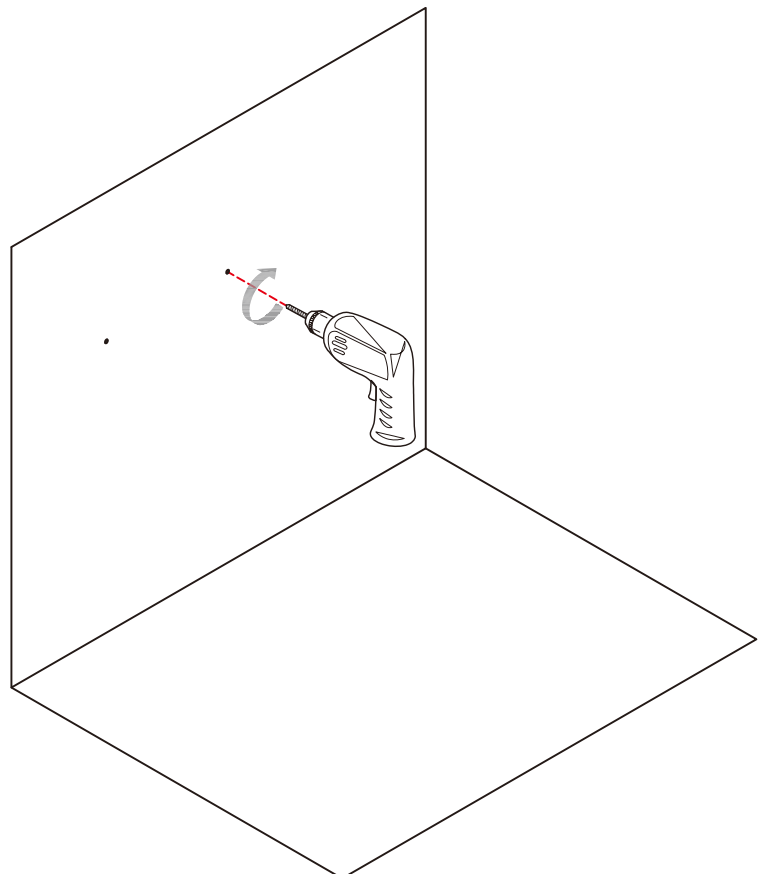


**STEP 3**

Hammer in the expansion plug.

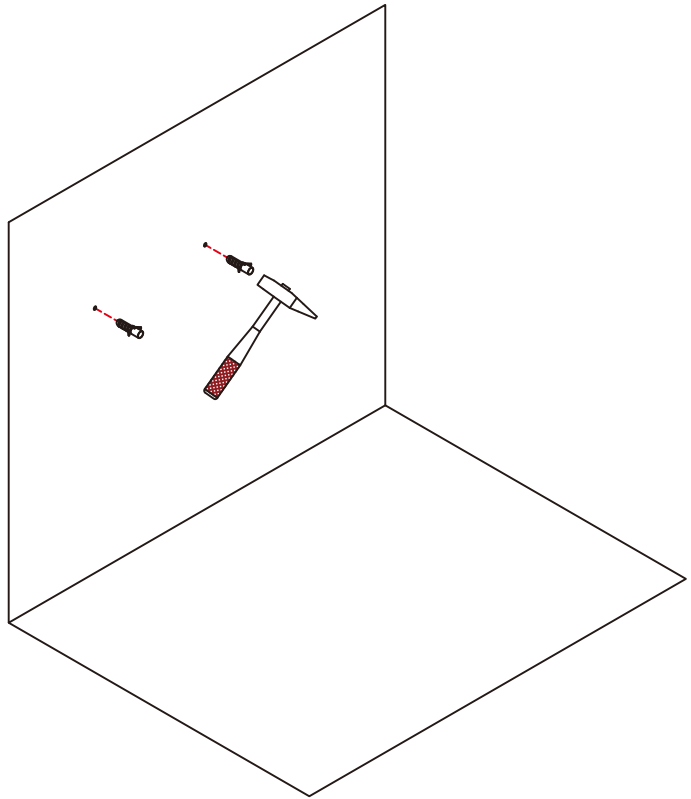


**STEP 4**

Secure the vanity onto the wall with screws.

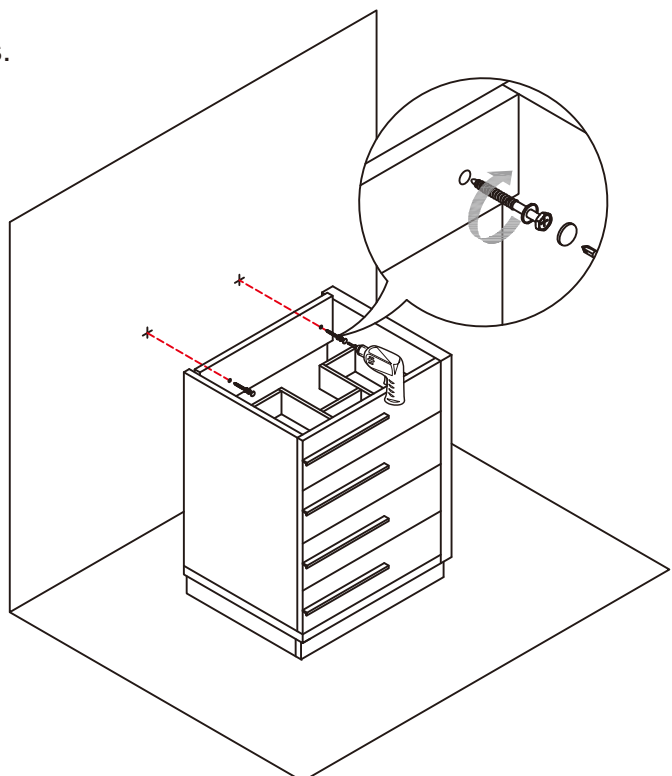


**STEP 5**

Install the basin with silicone.

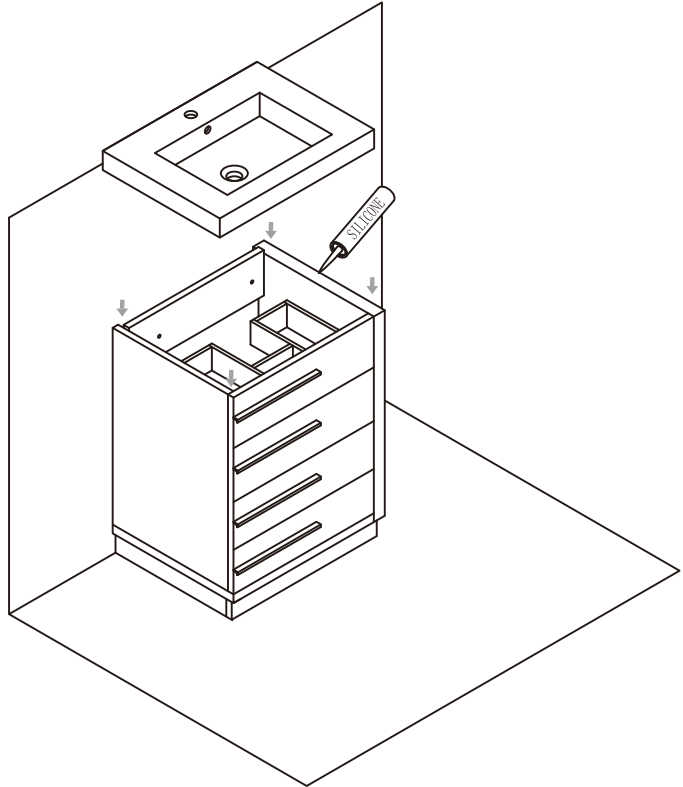

**STEP 6**

Installation complete.

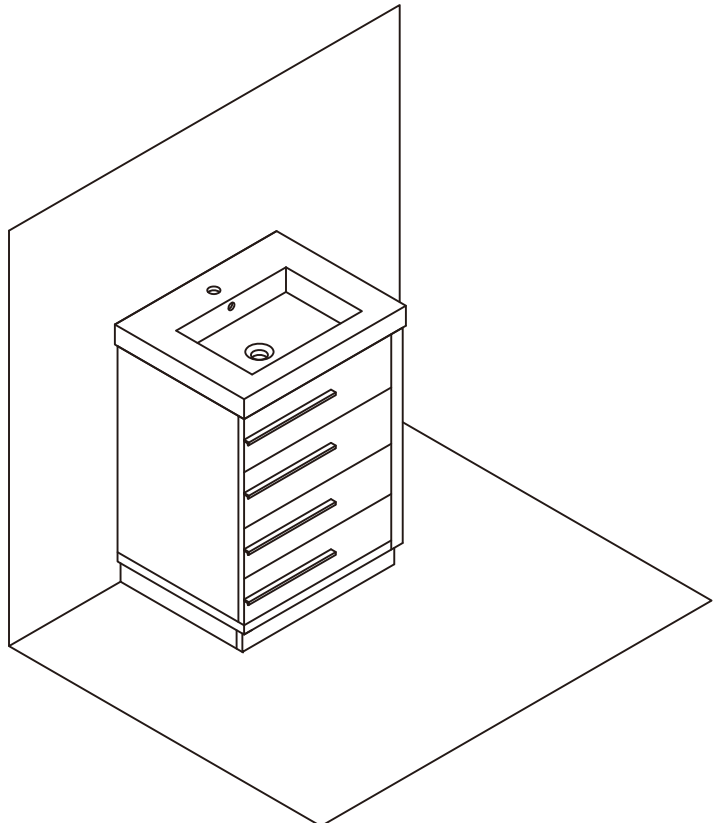



Blossom Kitchen & Bath Supply Corporation  
(718)-366-0088 | [sales@BlossomUS.com](mailto:sales@BlossomUS.com) | [www.BlossomUS.com](http://www.BlossomUS.com)

---


For clarification, please contact us at (718)-366-0088 or [sales@BlossomUS.com](mailto:sales@BlossomUS.com)

All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.






**BLOSSOM**<sup>®</sup>  
luxury made simple

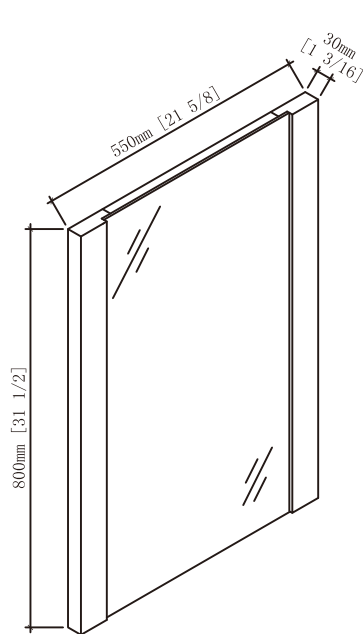

M6005-24

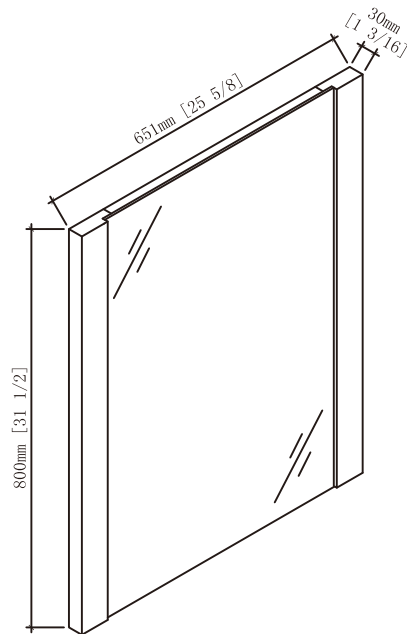

M6005-30

**[ BARCELONA ]**  
Series Mirror  
**Specification & Installation Guide**

## Features

- Slidable Modern Design
- Top-grade mirror
- Easy installation.

## Package Dimension

**24"** 24-39/64" x 4-9/64" x 34-29/64"

**30"** 28-37/64" x 4-9/64" x 34-29/64"

## Colors / Finishes

Glossy White - 01

Dark Oak - 07


## Gross Weight

**24"** 20 LBS

**30"** 23 LBS


**24"**





21-5/8" X 1-3/16" X 31-1/2 "

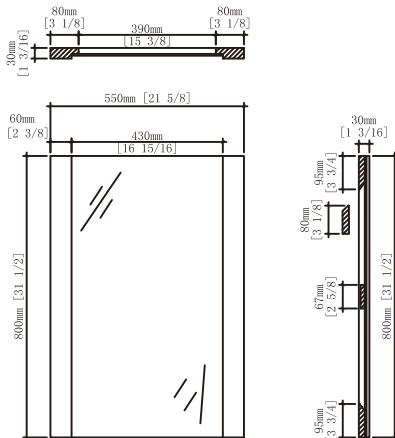

**30"**


25-5/8" X 1-3/16" X 31-1/2 "

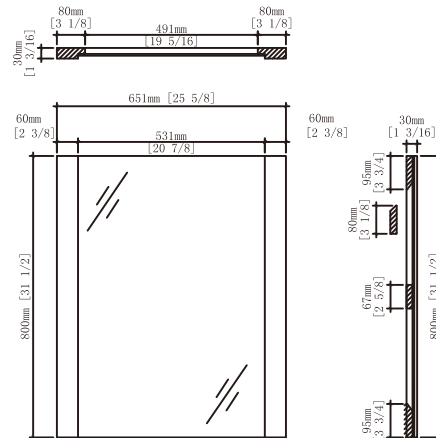

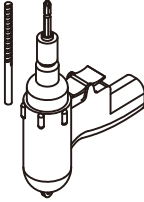Hardware				Tools (not includes)	
No.		Draw	Qty		
A	Green rubber plug		4pcs		
B	Screw		4pcs		


## STEP 1

1. Measure the wall-hung board and mark down the holes on the wall.
2. Drill the holes with suitable drill-bits base on different condition of the wall.
3. Use a hammer to knock the green expansion rubber plug into the hole.

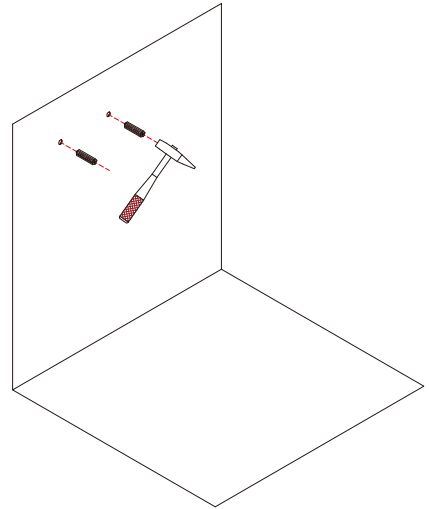


## STEP 2

Screw the 45 degree wall-hung panel onto the wall.

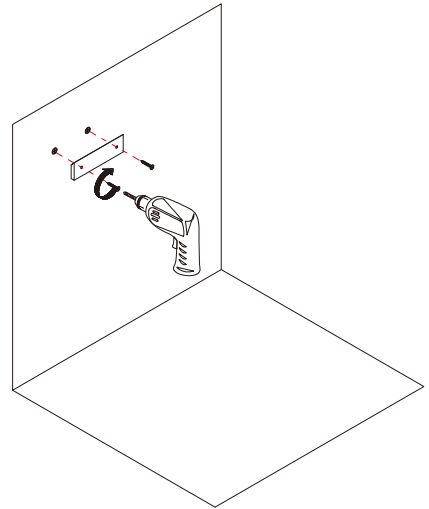

## STEP 3

Put up the back top panel of mirror on the 45 degree wall-hung panel .  
Finished.

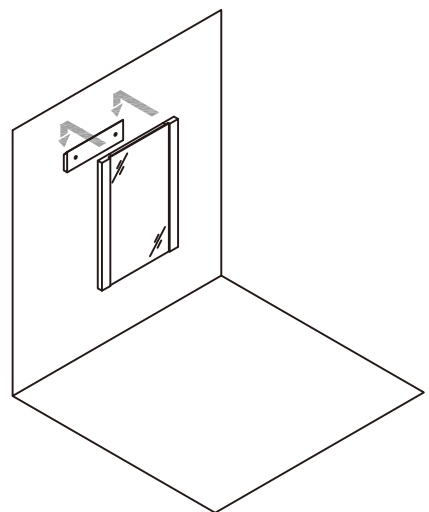



Blossom Kitchen & Bath Supply Corporation  
(718)-366-0088 | sales@BlossomUS.com | www.BlossomUS.com

---

For clarification, please contact us at (718)-366-0088 or sales@BlossomUS.com  
All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.